

ROOF CAP ASSEMBLY

INSTALLATION INSTRUCTIONS

6' & 9' (1.83M & 2.74M) Diameter Roofs

| | |
|---|---|
| Roof Cap Assembly | 2 |
| Roof Cap Hinge Installation | 2 |
| Heavy Duty Roof Cap Assembly..... | 3 |
| Heavy Duty Roof Cap Hinge Installation..... | 3 |

12' - 24' (3.66M - 7.32M) Diameter Roofs

| | |
|---|---|
| Standard Roof Cap Assembly | 4 |
| Roof Cap Hinge Installation | 4 |
| Heavy Duty Roof Cap Assembly..... | 5 |
| Heavy Duty Roof Cap Hinge Installation..... | 5 |

27' - 48' (8.23M - 14.63M) Diameter Roofs

| | |
|---------------------------------------|---|
| Standard Roof Cap Assembly | 6 |
| Standard Roof Cap Latch Assembly..... | 6 |
| Hold Down Bracket Installation | 7 |
| Heavy Duty Roof Cap Assembly..... | 7 |
| Heavy Duty Roof Cap Attachment | 8 |



IMPORTANT
READ THESE INSTRUCTIONS CAREFULLY
FOR SAFETY AND PROPER INSTALLATION


BUILT
for **LIFE™**

290891



6' & 9' (1.83M & 2.74M) Diameter Roofs

Roof Cap Assembly

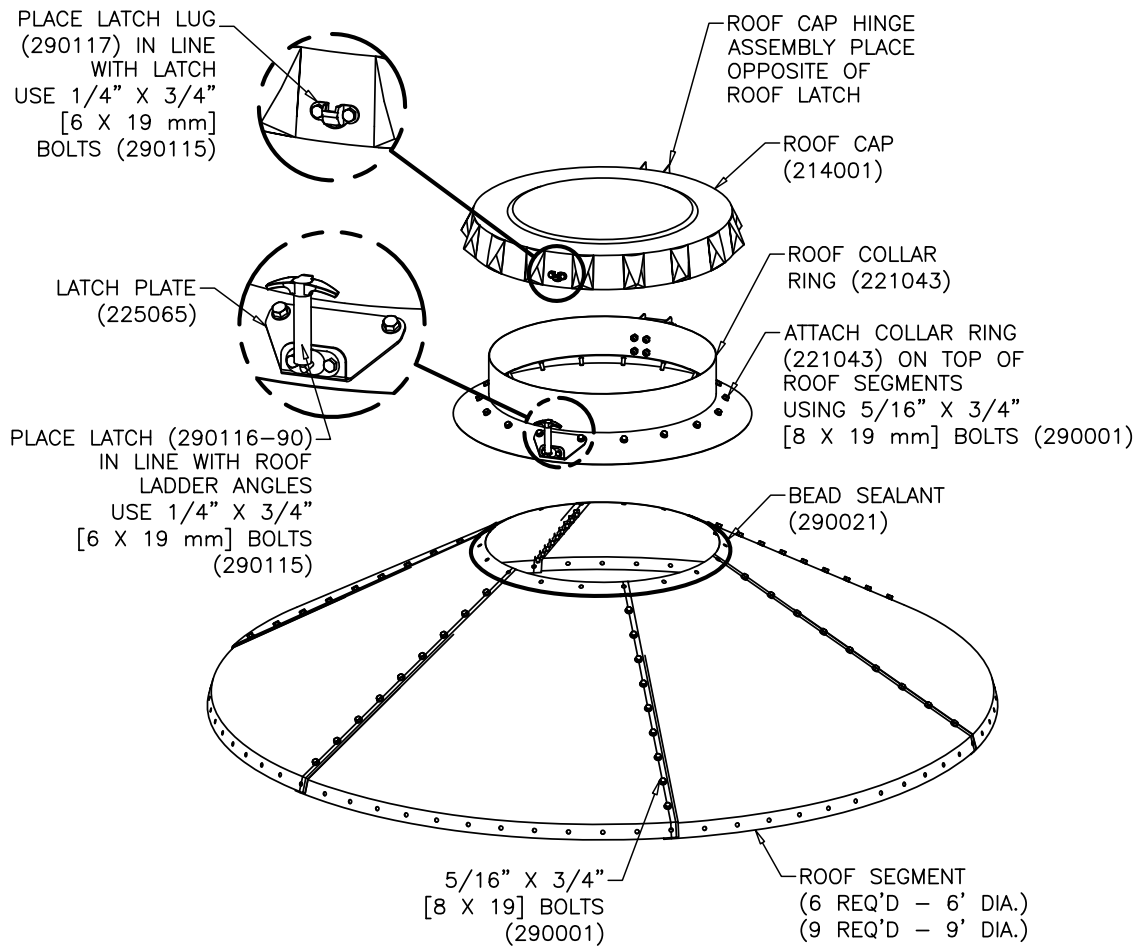


Roof Cap Hinge Installation

NOTES:

1. CONNECT HINGE (PART B) (214002) TO ROOF CAP USING (2) 5/16" X 3/4" [8 X 19] HEX HEAD BOLTS (290001) AND 5/16" [8 MM] HEX NUTS (290010).


2. CONNECT HINGE (PART A) (214003) TO ROOF COLLAR RING (221043) USING (4) 5/16" X 3/4" [8 X 19] HEX HEAD BOLTS (290001) AND 5/16" [8 MM] HEX NUTS (290010).

3. ASSEMBLE TOGETHER USING HINGE SPACER (214004), 3/8" X 3 1/2" [10 X 89 MM] HEX HEAD BOLT (290012) AND 3/8" [10 MM] HEX NUT (290014) AS SHOWN.

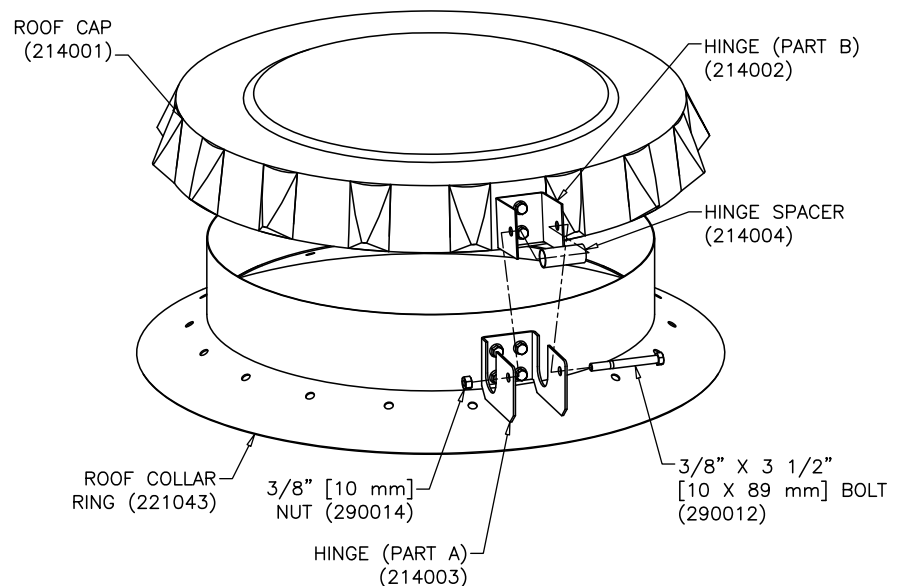

6' & 9' (1.83M & 2.74M) Diameter Roofs

Heavy Duty Roof Cap Assembly

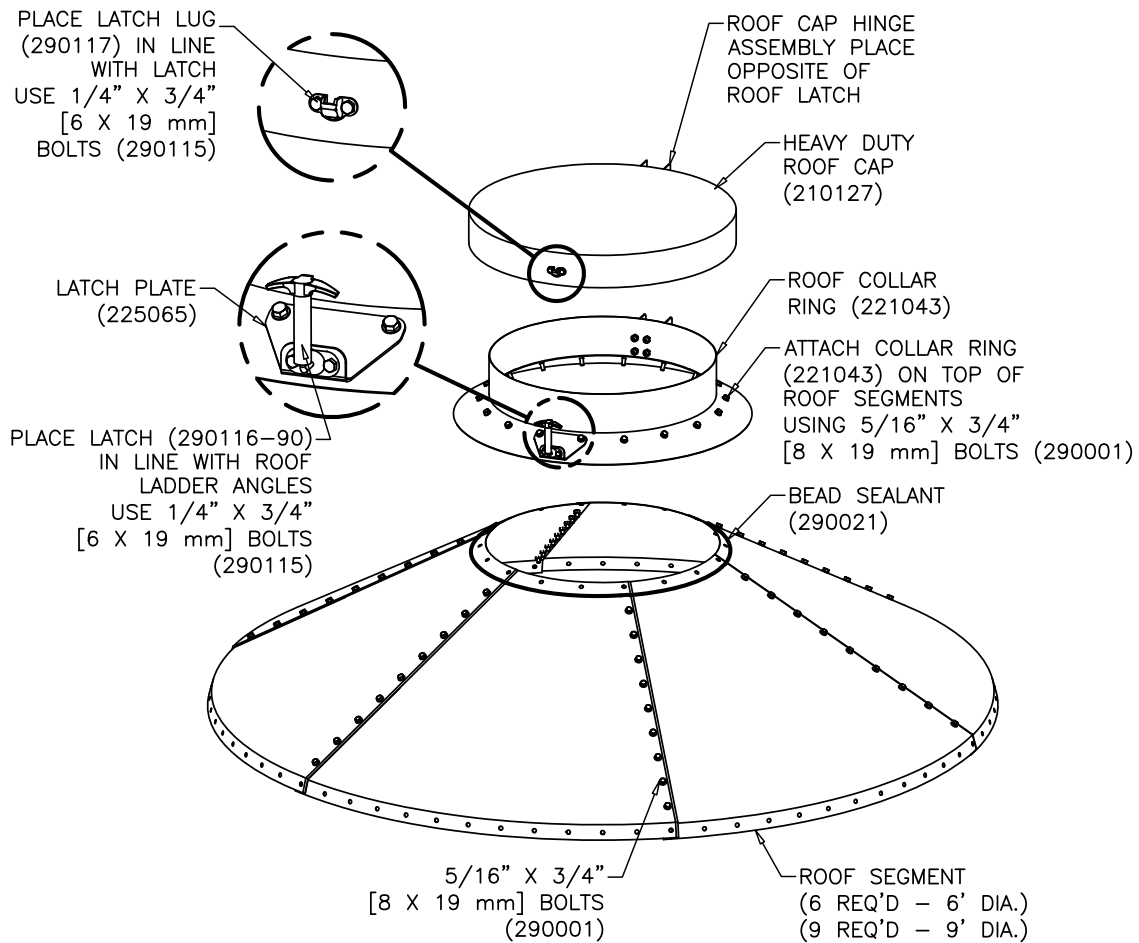


Heavy Duty Roof Cap Hinge Installation

NOTES:


1. CONNECT HINGE (PART A) (214003) TO ROOF COLLAR RING (221043) USING (4) 5/16" X 3/4" [8 X 19] HEX HEAD BOLTS (290001) AND 5/16" [8 MM] HEX NUTS (290010).

2. ASSEMBLE TOGETHER USING HINGE SPACER (214004), 3/8" X 3 1/2" [10 X 89 MM] HEX HEAD BOLT (290012) AND 3/8" [10 MM] HEX NUT (290014) AS SHOWN.

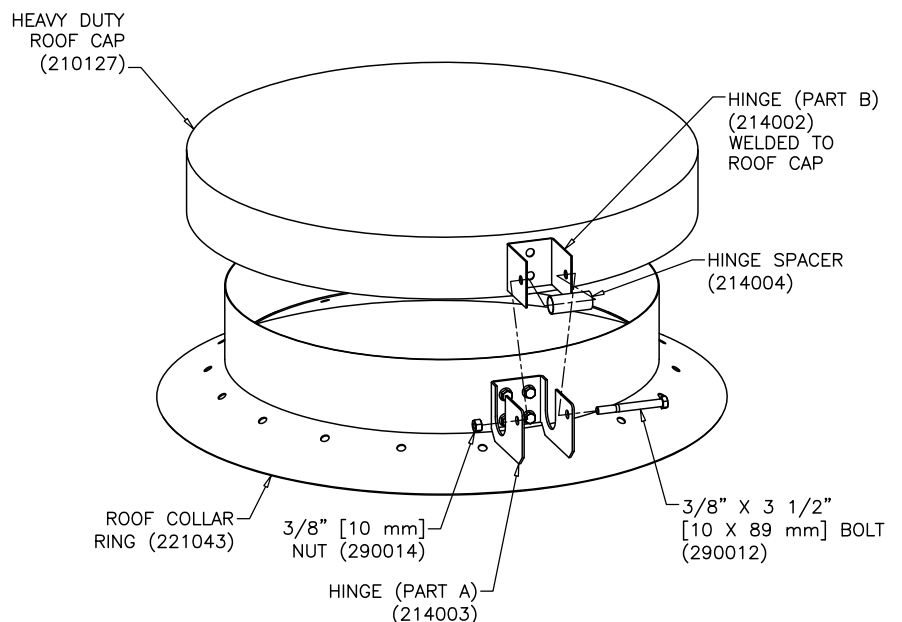

12' - 24' (3.66M - 7.32M) Diameter Roofs

Standard Roof Cap Assembly

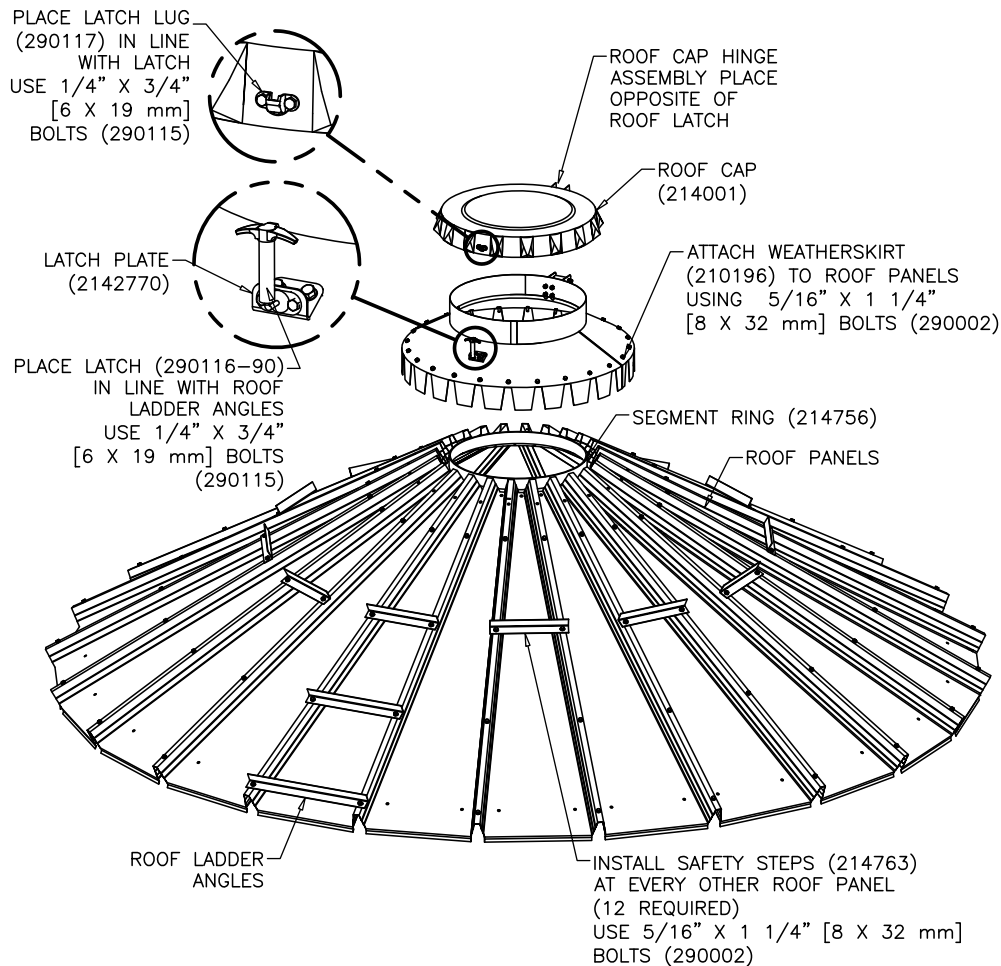


Roof Cap Hinge Installation

NOTES:

1. CONNECT HINGE (PART B) (214002) TO ROOF CAP USING (2) 5/16" X 3/4" [8 X 19 MM] HEX HEAD BOLTS (290001) AND 5/16" [8 MM] HEX NUTS (290010).


2. CONNECT HINGE (PART A) (214003) TO WEATHERSKIRT USING (4) 5/16" X 3/4" [8 X 19 MM] HEX HEAD BOLTS (290001) AND 5/16" [8 MM] HEX NUTS (290010).

3. ASSEMBLE TOGETHER USING HINGE SPACER (214004), 3/8" X 3 1/2" [10 X 89] HEX HEAD BOLT (290012) AND 3/8" [10 MM] HEX NUTS (290014) AS SHOWN.

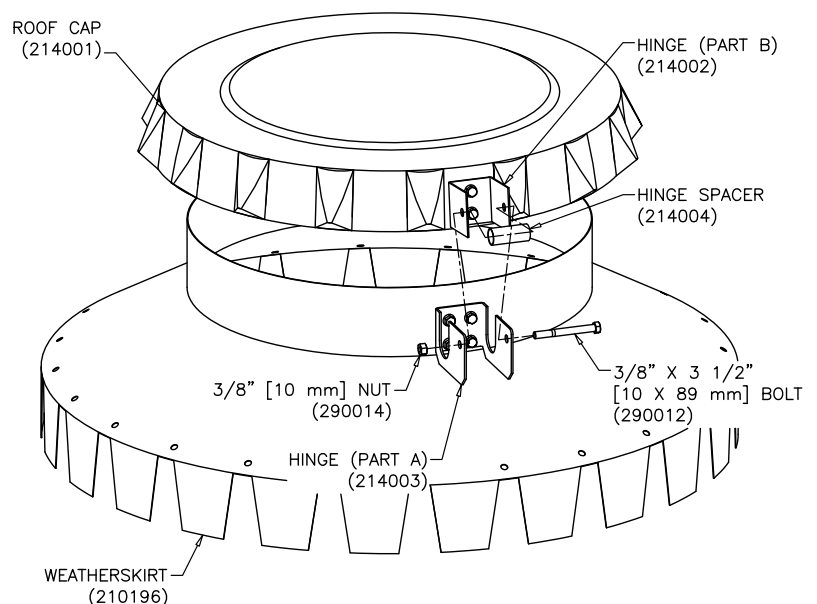

12' - 24' (3.66M - 7.32M) Diameter Roofs

Heavy Duty Roof Cap Assembly

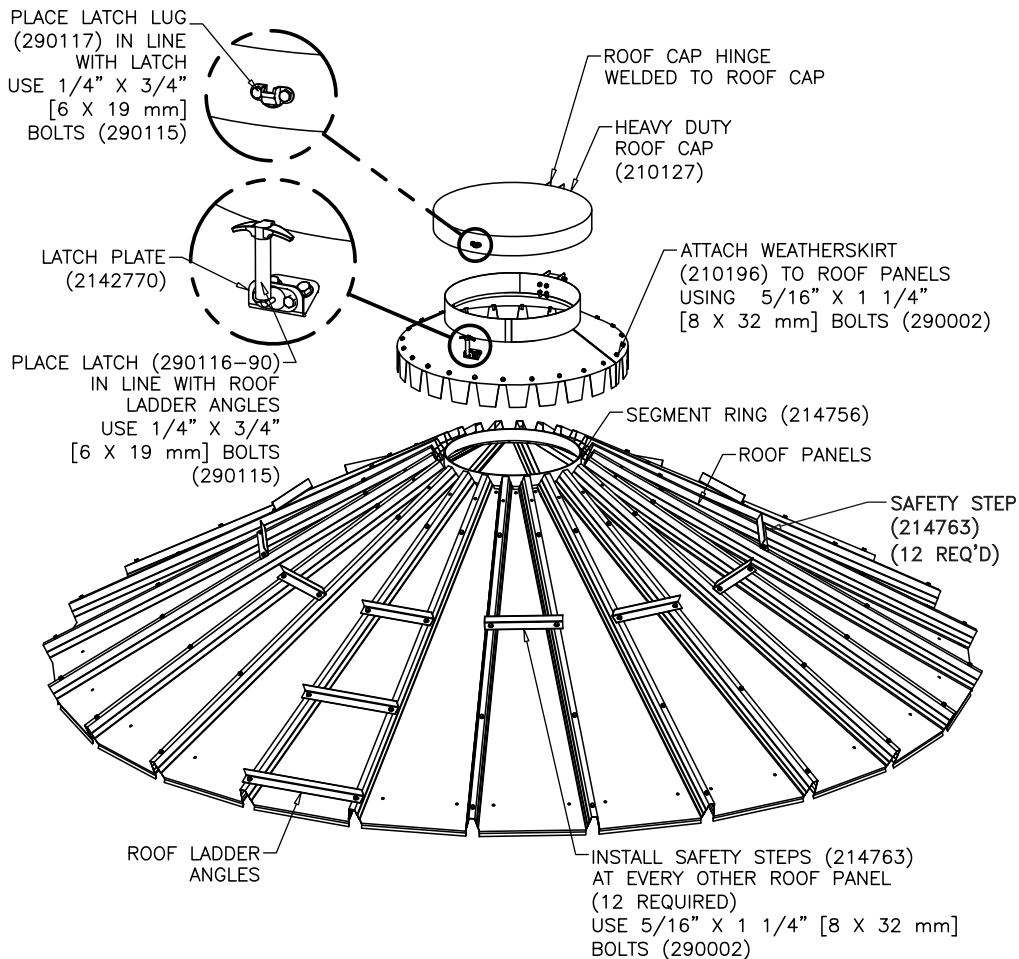


Heavy Duty Roof Cap Hinge Installation

NOTES:


1. CONNECT HINGE (PART A) (214003) TO WEATHERSKIRT (210196) USING (4) 5/16" X 3/4" [8 X 19MM] HEX HEAD BOLTS (290010).

2. ASSEMBLE TOGETHER USING HINGE SPACER (214004), 3/8" X 3 1/2" [10 X 89MM] HEX HEAD BOLT (290012) AND 3/8" [10MM] HEX NUT (290014) AS SHOWN.

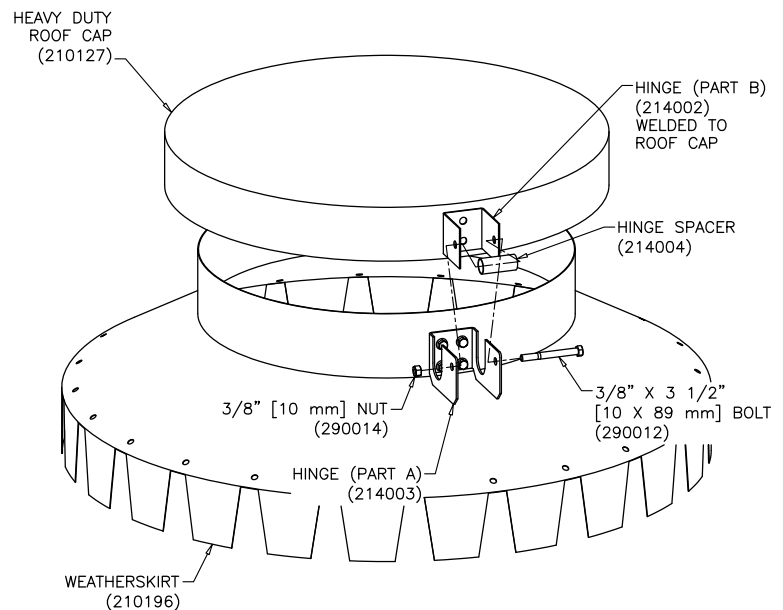


27' - 48' (8.23M - 14.63M) Diameter Roofs

Standard Roof Cap Assembly

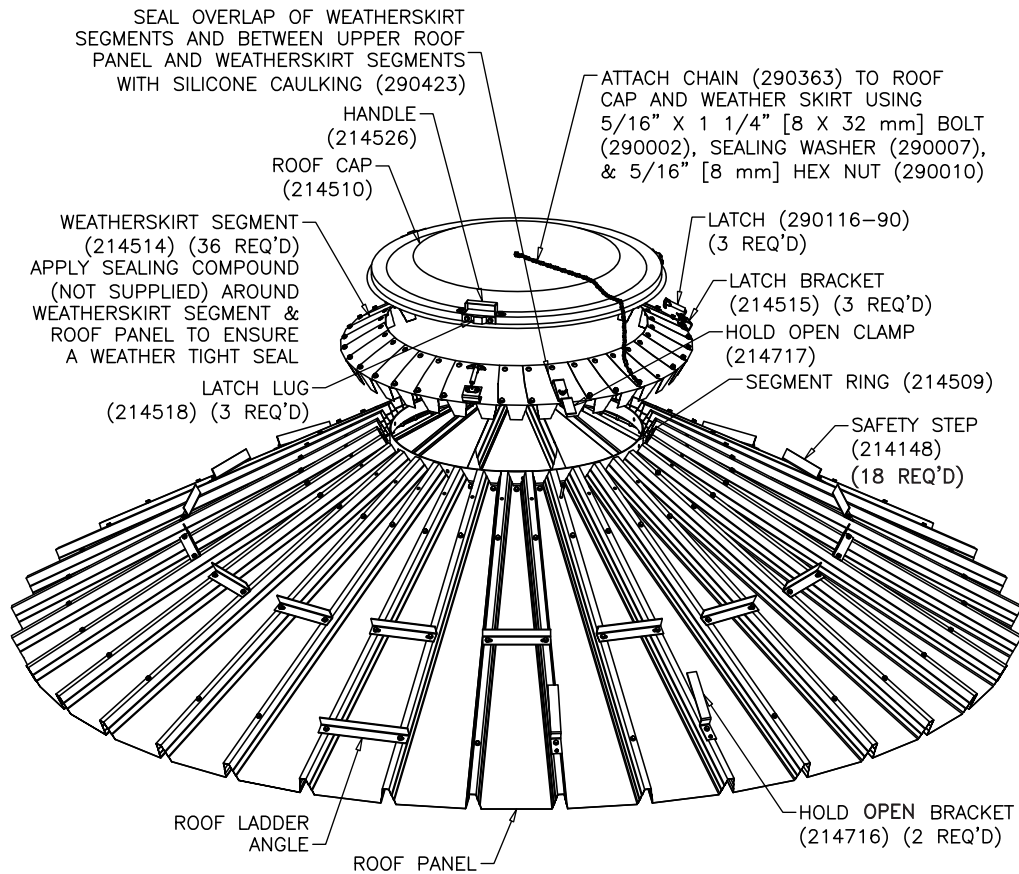


Standard Roof Cap Latch Assembly

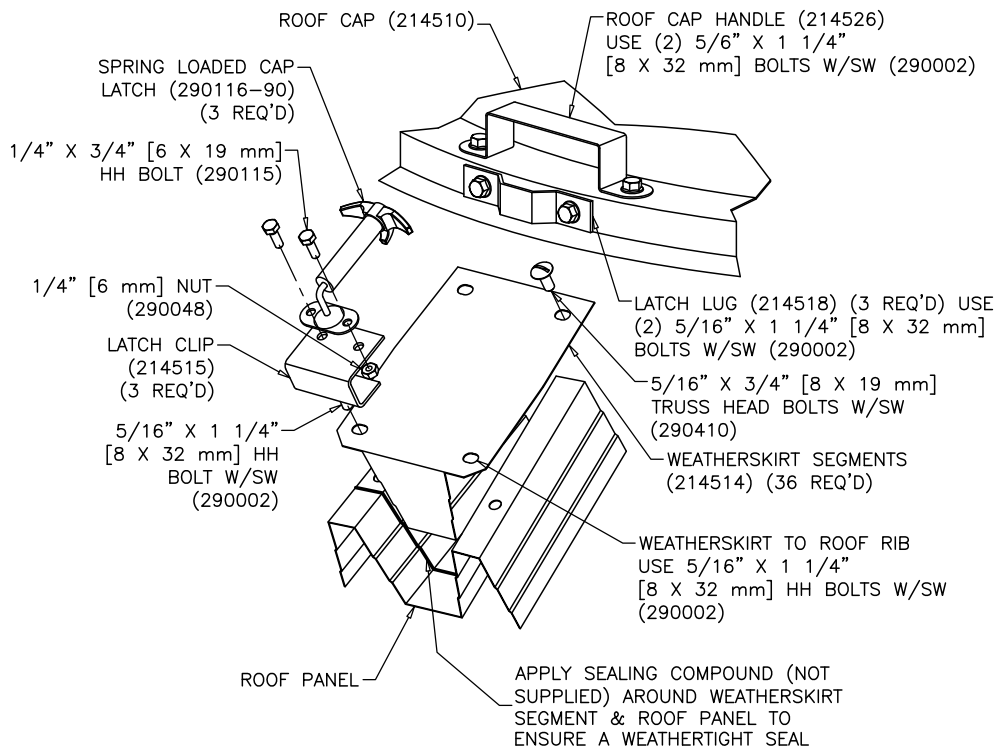


27' - 48' (8.23M - 14.63M) Diameter Roofs

Hold Down Bracket Installation

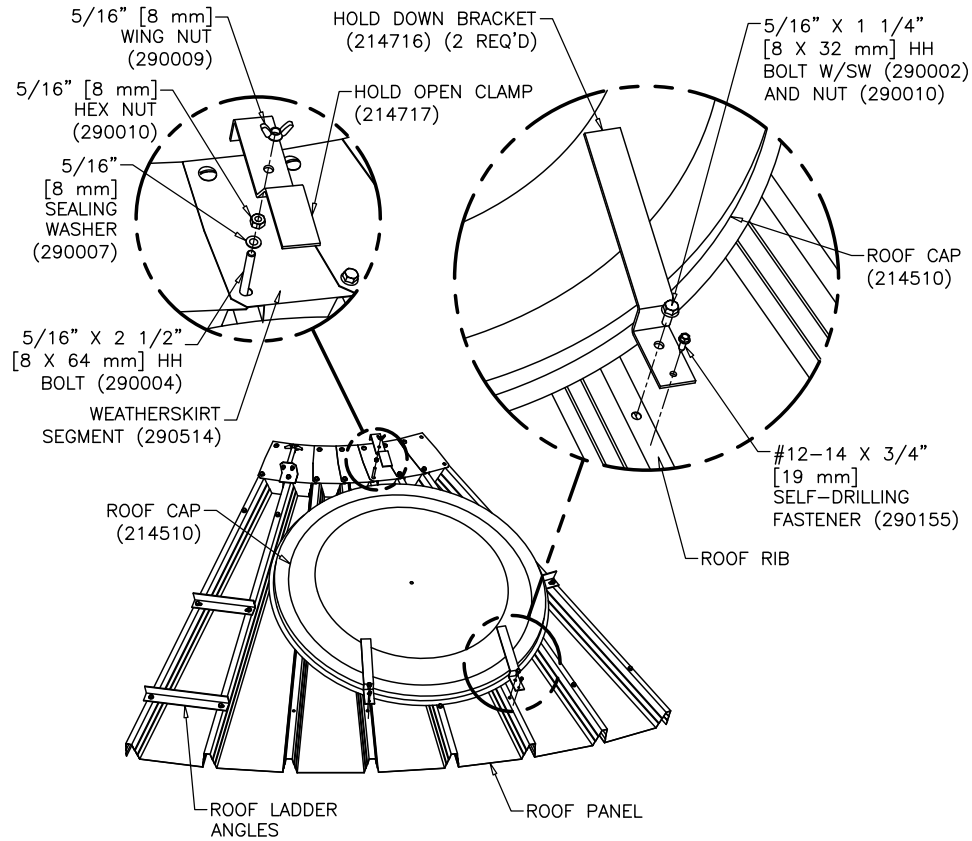


Heavy Duty Roof Cap Assembly

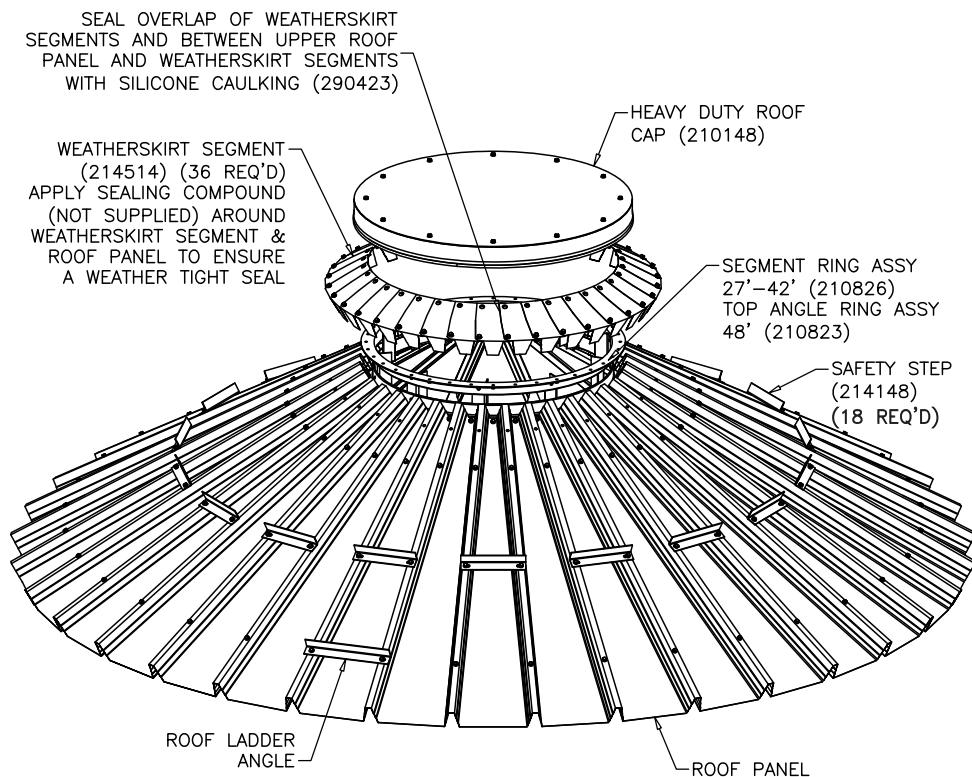

27' - 48' (8.23M - 14.63M) Diameter Roofs

Heavy Duty Roof Cap Attachment

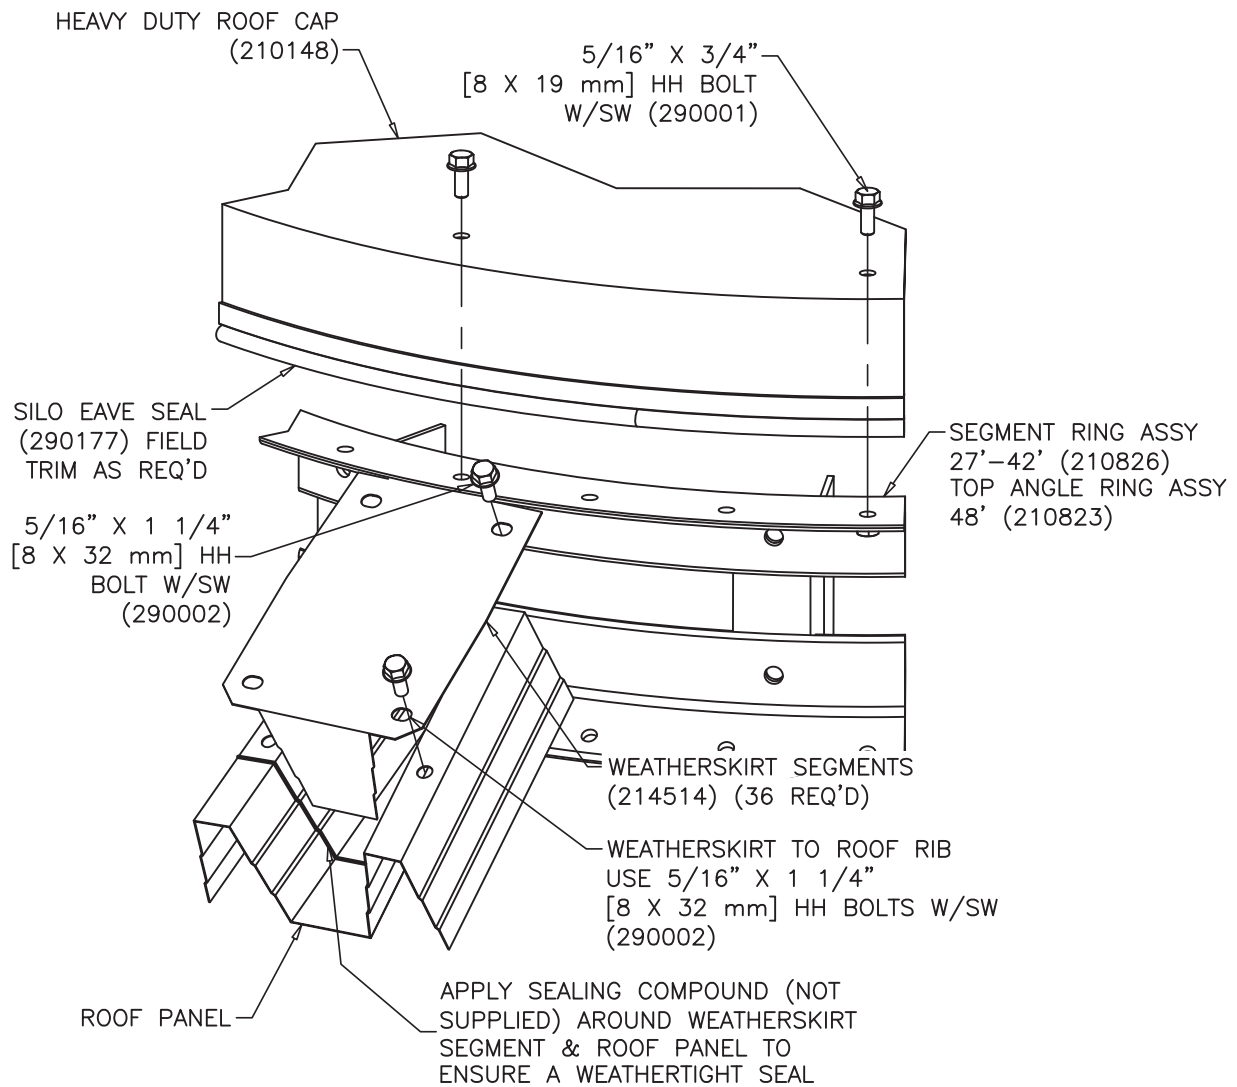

5400 E. Broadway Avenue
PO Box 11215
Spokane, WA 99211 USA

Phone: +1-509-535-1571
E-mail: info@SCAFCOgrain.com
www.SCAFCOgrain.com



GS3006E0920